


- To install new handle:
1. Rotate original handle to the counterclockwise detented position.
 2. Remove bonnet screw and set aside for later use.
 3. Slide bonnet-handle assembly off of rotor shaft.
 4. Retrieve ball, spring, and o-ring for reassembly.
 5. Coat spring and ball with lithium grease. Insert spring into adapter hole. Set ball in original detent hole- do not relocate.
 6. Install adapter in place of bonnet (o-ring must be in position) and tighten, using item 4.
 7. Install replacement handle on to the adapter, in the position required.
 8. Insert original bonnet screw & tighten.

4	1	85600904	SCREW, ADAPTER, HANDLE, VALVE
3	1	85600903	HANDLE, VALVE, SHORT
2	1	85600902	HANDLE, VALVE, LONG
1	1	85600901	ADAPTER, HANDLE, VALVE
No.	QTY	PART No.	DESCRIPTION

PARTS LIST	 VEKTEK VEKTEK, INC. 1334 E. SIXTH AVE. P.O. BOX 625 EMPORIA, KS. 66801 U.S.A.
	Model Number 62-7004-08
PARTS LIST, KIT, HANDLE, VALVE	
SIZE A	PL-6202
FORM FEG035_PL_ASIZE, REV. A	

A	2150	RELEASE	MES	03-22-10
REV	IN ACCORDANCE WITH ECN	EFFECTIVE DATE	REVISED BY	DATE
DRW BY: MES	DRAWING STATUS: Released PRODUCTION APPROVED FOR RELEASED STATUS ONLY			
DATE: 03-22-10				