

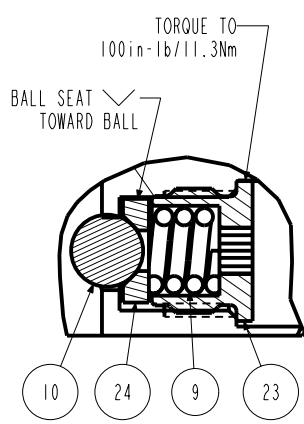

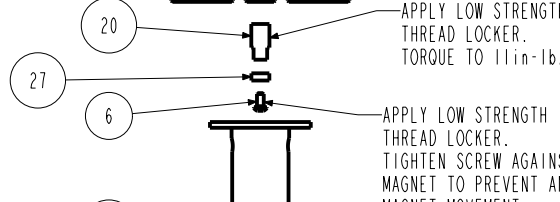
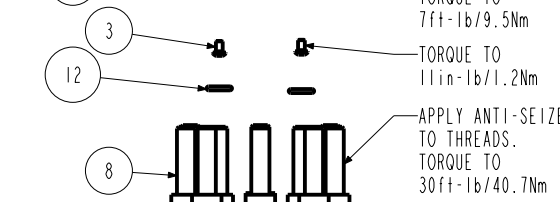
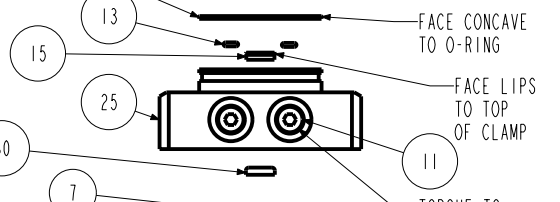


APPLY LUBRICANT TO ALL SEALS
PRIOR TO INSTALLATION.
DO NOT USE SILICONE TYPE LUBRICANTS.
FOR PROPER ARM MOUNTING SEE IS1505.

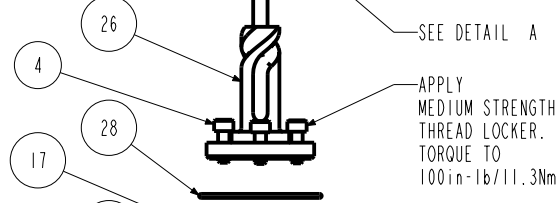

DETAIL A
SCALE 1.500

APPLY PRIMER N TO CAP SCREW,
PLUNGER AND BUSHING THREADS.
INSERT CAP SCREW THRU WASHER.
APPLY MEDIUM STRENGTH THREAD
LOCKER TO CAP SCREW THREAD
AND TORQUE TO 50 in-lb/5.6 Nm.
APPLY HIGH STRENGTH THREAD
LOCKER TO BUSHING THREAD AND
TORQUE TO 100 in-lb/11.3 Nm.

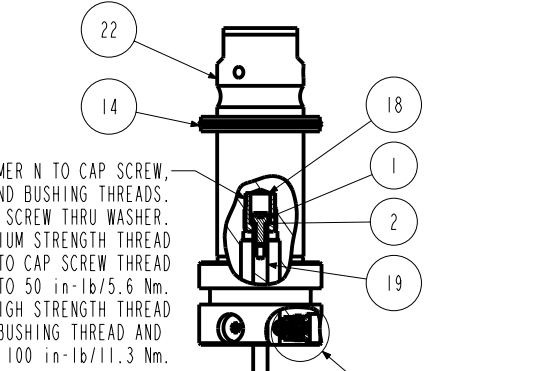

N/A	N/A	IS1505	INSTRUCTION SHEET, ARM INSTALLATION		
N/A	N/A	6V711050	SEAL KIT, FKM		
N/A	N/A	60711050	SEAL KIT, STANDARD		
31	1	39V11051	WIPER, PRESS-IN, (1-1/2)	X	X
30	1	39V10029	WIPER, PRESS-IN, (1/4)	X	X
29	1	39H52000	SEAL, U-CUP, 1-1/2 x 1/8 x 1-3/4	X	39V52000
28	1	39H51002	O-RING, (-033)	X	39V51002
27	1	91100001	MAGNET, .130 x .312, PS		
26	1	81592131	CAM, SC, LP, 7500/33KN, RH, TC, PR		
25	1	81542113	BASE, SC, BF, LP, 7500, PR		
24	3	81532108	SEAT, BALL, SC, LP, TC		
23	3	81532107	RETAINER, SC, LP, TC		
22	1	81512121	PLUNGER, SC, LP, 7500&33KN, DA, TC, PR		
21	1	81500061	HOUSING, PS, MAG, SC, LP		
20	1	81500060	ADAPTOR, PS, MAG, SC, LP		
19	1	81500053	ROD, ACTUATOR, SC, LP, BF, 7500/33KN		
18	1	81500039	BUSHING, PLUNGER, PR, SC, LP		
17	1	39054017	BU RING, (-033)	X	39054023
16	1	39054016	BU RING, (1.5x.125x.063)	X	X
15	1	39052043	SEAL, LL, (1/4 X 1/8 X 1/8 X 1/2)	X	39V52043
14	1	39052030	SEAL, CROWN, 1-3/4x2-1/8x1/4	X	39V52030
13	2	39051041	O-RING, (-006)	X	39V51041
12	2	39050042	O-RING, (-011)	X	39051025
11	2	30601144	PLUG, SOCH, SAE 4		
10	3	23650004	BALL, TUNGSTEN-CARBIDE. 250		
9	3	23350066	SPRING, COMPRESSION		
8	10	21500305	SHCS, M8 X 1.25-6G X 30MM		
7	2	21500200	WASHER		
6	1	21500044	SCREW, CAP, BTNH, M3-0.5 X 6, SSTL		
5	3	21500043	SHCS, M3-0.5 X 6 ALY		
4	3	21500031	SHCS, M5 X 0.8 X 14, ALY		
3	2	21500019	SCREW, CAP, BTNH, M3 X 6, ALY		
2	1	21430022	WASHER		
1	1	21410049	SCREW, CAP, SOCH, 8-32 X 3/8, ALY		
No.	QTY	PART No.	DESCRIPTION	Std. Seal Kit	FKM Seal Kit

PARTS LIST



VEKTEK, INC.
1334 E. SIXTH AVE. P.O. BOX 625
EMPORIA, KS. 66801 U.S.A.

ASSEMBLIES AFFECTED
14222100PS
14222100FPS

PARTS LIST, ASST, SC, LP, TC, BF, 7500, DA, RH, PS

SIZE
A **PL7219**

REV
A

A	2679	RELEASE	JDW	06/23/14
REV	IN ACCORDANCE WITH ECN	EFFECTIVE DATE	REVISED BY	DATE
DRW BY:	JDW	DRAWING STATUS: Released		
DATE:	10/16/13	PRODUCTION APPROVED FOR RELEASED STATUS ONLY		


1 **2**

**READ ALL INSTRUCTIONS BEFORE INSTALLING ARMS
FAILURE TO FOLLOW INSTALLATION INSTRUCTIONS
WILL VOID PRODUCT WARRANTY !**

-Installing or Positioning of Low Profile Swing Clamp Arms-

**NOTE: If the arm is already installed on the plunger,
loosen the cap screw.**

**CAUTION: Never attempt to rotate the arm before loosening
the cap screw. This can damage the plunger rotating mechanism.**

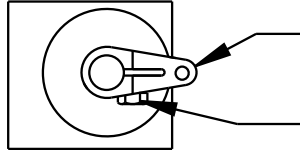

- 1. Rotate the arm to the desired radial position.**
- 2. Tighten to the torque specification listed below.**

MODEL	TORQUE ft-lb	TORQUE N-m
50001b & 22Kn	115 ft-lb	156 N-m
75001b & 33Kn	225 ft-lb	305 N-m

**IT IS RECOMMEND THE CROSS BOLT
BE REPLACED IF THE ARM NEEDS
REMOVED AFTER IT HAS BEEN IN SERVICE.**

CROSS BOLT	CROSS BOLT	CROSS BOLT	CROSS BOLT
5000 & 22KN	5000 & 22KN	7500 & 33KN	7500 & 33KN
SHORT LONG DOUBLE	UPREACH	SHORT LONG DOUBLE	UPREACH
21-5000-24	21-5000-25	21-5000-28	21-5000-25

**Instruction
Sheet**



VEKTEK, INC.
1334 E. SIXTH AVE. P.O. BOX 625
EMPORIA, KS. 66801 U.S.A.

Arm Installation Instruction Sheet

Low Profile Swing Clamps

SIZE A	IS1505	REV C
-----------	---------------	----------

FORM FEG041-IS-ASIZE, REV. B

C	2799	RELEASE	JDW	01/29/15
REV	IN ACCORDANCE WITH ECN	EFFECTIVE DATE	REVISED BY	DATE
DRW BY: MES	DRAWING STATUS: Released			
DATE: 08/01/05	PRODUCTION APPROVED FOR RELEASED STATUS ONLY			

SHEET 1 OF 1