
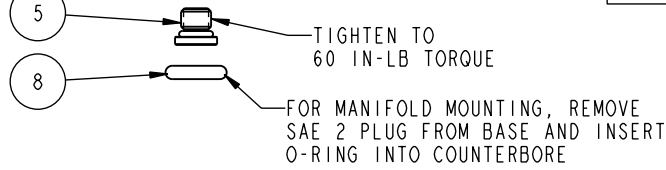
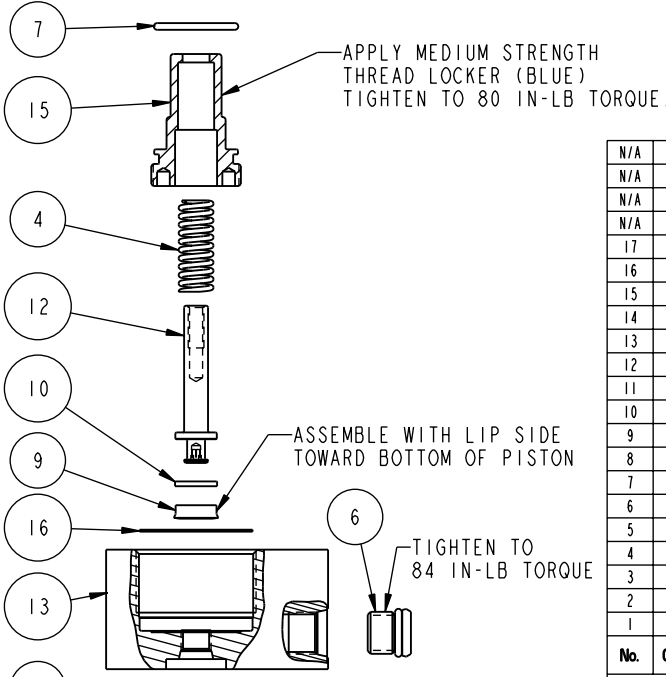



SEE IS1003 FOR SERVICE INSTRUCTIONS.  
 LUBRICATE ALL SEALS WITH CLEAN HYDRAULIC OIL PRIOR TO ASSEMBLY.  
 DO NOT USE SILICONE BASED LUBRICANTS.

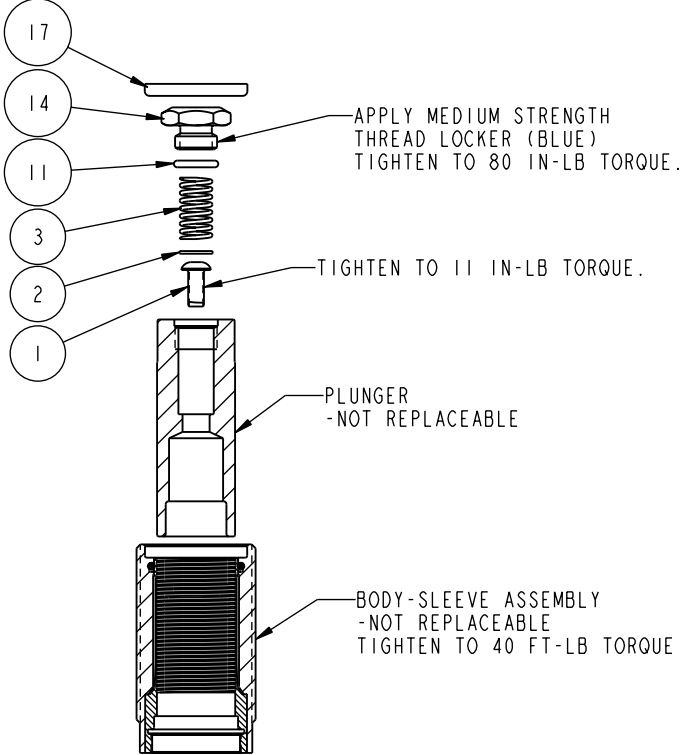

No.	QTY	PART No.	DESCRIPTION	Standard Seal Kit	FM Seal Kit	Spring Kit
N/A	N/A	IS1003	INSTRUCTION SHEET			
N/A	N/A	61100211	SPRING KIT			
N/A	N/A	6V100108	SEAL KIT, FKM			
N/A	N/A	60100109	SEAL KIT, STANDARD			
17	1	39V50030	WIPER, PRESS-IN	X	X	
16	1	39H11062	GASKET, (-213), .953 x .118 x .035	X	X	X
15	1	81040824	RETAINER, WS, FA, 2500 & 11KN			
14	1	81040817	BOLT, CONTACT, WS, FA, 2500			
13	1	81040805	BASE, WS, FA, BM, 2500			
12	1	81010812	PISTON, WS, FA, 2500 & 11KN			
11	1	55250005	O-RING	X	X	
10	1	39054028	RING, BU, (-201)	X	X	
9	1	39050028	SEAL, BEVEL, 3/16 X 7/16 X 1/8	X	39V50028	
8	1	39000050	O-RING	X	39051022	
7	1	39000021	O-RING	X	39V51020	
6	1	30601144	PLUG, SOCH, SAE 4			
5	1	30601123	PLUG, SOCH, SAE 2			
4	1	23350059	SPRING, COMP., .261x.051x1.25, 34.41,SST			X
3	1	23350002	SPRING			X
2	1	21430001	WASHER			
1	1	21410075	BUTTON HEAD CAP SCREW			

## PARTS LIST

ASSEMBLIES AFFECTED  
10080807  
10080807F



VEKTEK, INC.  
 1334 E. SIXTH AVE. P.O. BOX 625  
 EMPORIA, KS. 66801 U.S.A.

REVISIONS:

REV	DESCRIPTION	EFFECTIVE DATE	REVISED BY	DATE
E	2172	RELEASE	JDW	5-3-10
REV	IN ACCORDANCE WITH ECN	EFFECTIVE DATE	REVISED BY	DATE

DRW BY: JDW  
DATE: 8-4-07

DRAWING STATUS: **Released**

PRODUCTION APPROVED FOR RELEASED STATUS ONLY

FORM FEG035\_PL\_AS1ZE, REV. A

SHEET 1 OF 1

Vekttek, Inc. 1334 East Sixth Ave. P.O. Box 625 Emporia, Ks. 66801 U.S.A.	Instruction Sheet	IS	1003	
		REV:	E, I.A.W. ECN2386	
		REV. BY/DATE:	JDW	5-4-12
		APPR/DATE:	JAM	6-22-12
<b>TITLE: Disassembly/Assembly Instructions: 1000 &amp; 2500 Fluid Advance Work Supports</b>				

Read all instructions before disassembly

Refer to the illustration on page three for component part numbers and a tool list.

## Disassembly

**Notice: When disassembling multiple work supports, the plunger and body/sleeve assembly from each work support should be kept together.**


1. Unscrew the body/sleeve assembly (9) from the base (15) or fixture. **Caution- Use a six-point socket only. Other types of wrenches may damage the work support.**
2. Hold the plunger (6) stationary and unscrew the contact bolt (1). Remove o-ring (16) from contact bolt (1).
3. Remove the spring (2) and spacer (10) from inside the plunger (6).
4. Hold the piston (8) stationary and unscrew the cap screw (3).
5. Slide the plunger (6) out of the top of the body/sleeve assembly (9) and then push the piston (8) and spring (13) out of the retainer (14).
6. Remove the wiper (7) from the body/sleeve assembly (9). **Do not scratch the inner sleeve.**
7. Hold the body/sleeve assembly (9) stationary and unscrew the retainer (14) from the body/sleeve assembly (9) using a spanner wrench.
8. Remove the piston seal (11) and piston seal back-up ring (12) from the piston (8), the O-ring (5) from the retainer (14) and the gasket (4) from the base (15) or fixture.
9. Clean all parts thoroughly and set aside to dry.

Vekttek, Inc. 1334 East Sixth Ave. P.O. Box 625 Emporia, Ks. 66801 U.S.A.	<b>Instruction Sheet</b>	<b>IS</b>	<b>1003</b>	
		<b>REV:</b>	<b>E, I.A.W. ECN2386</b>	
		<b>REV. BY/DATE:</b>	<b>JDW</b>	<b>5-4-12</b>
		<b>APPR/DATE:</b>	<b>JAM</b>	<b>6-22-12</b>
<b>TITLE: Disassembly/Assembly Instructions: 1000 &amp; 2500 Fluid Advance Work Supports</b>				

## Assembly

1. Lubricate all O-rings, gaskets, back-up rings and seals with clean hydraulic fluid (Vekttek 65-0010-01 or equivalent). Apply Loctite primer N® or equivalent to the threads of the contact bolt (1) and the retainer (14) and set aside to dry.
2. Press the wiper (7) into the body/sleeve assembly (9) using only enough force to seat the wiper in the counterbore. **Caution:** Excess force may cause the inner sleeve to collapse.
3. First install the back-up ring (12) then the piston seal (11) onto the piston (8) with the sealing lips of the piston seal (11) toward the piston (8) base.
4. Install the O-ring (5) onto the retainer (14).
5. Apply Loctite 243® or equivalent to the threads of the retainer (14).
6. Hold the body/sleeve assembly (9) stationary and screw the retainer (14) into the body/sleeve assembly (9). Tighten to the torque specification on the parts list.
7. Slide the spring (13) onto the piston (8) and insert both parts into the retainer (14)
8. Insert the plunger (6) into the top of the body/sleeve assembly (9).
9. While holding the piston (8) stationary insert the cap screw (3) into the top of the plunger (6) and thread the cap screw (3) into the piston (8). Tighten to the specification on the parts list.
10. Insert the flat washer (10) and the spring (2) into the top of the plunger (6).
11. Install o-ring (16) onto contact bolt (1). Apply one drop of Loctite 243® or equivalent to the threads of the contact bolt (1). While holding the plunger (6) stationary tighten the contact bolt (1) to the plunger (6). Tighten to the torque specification on the parts list.
12. Place the gasket (4) flat in the bottom of the base (15) or mounting cavity. Insert the work support assembly into the base (15) or mounting cavity and tighten it to the torque specification on the parts list.  
**Caution- Use a six-point socket only. Other types of wrenches may damage the work support.**

<b>Vektek, Inc.</b> 1334 East Sixth Ave. P.O. Box 625 Emporia, Ks. 66801 U.S.A.	<b>Instruction Sheet</b>	<b>IS 1003</b>	
		<b>REV: E, I.A.W. ECN2386</b>	
		<b>REV. BY/DATE: JDW</b>	<b>5-4-12</b>
		<b>APPR/DATE: JAM</b>	<b>6-22-12</b>
<b>TITLE: Disassembly/Assembly Instructions: 1000 &amp; 2500 Fluid Advance Work Supports</b>			

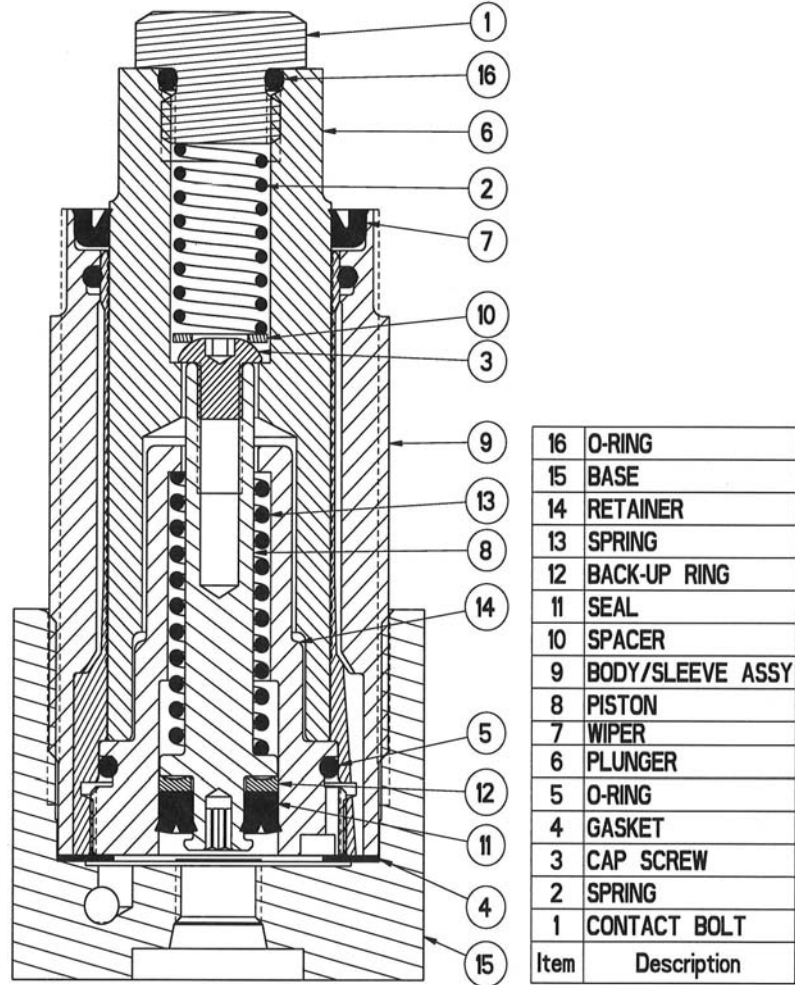

Model Number	Tool List
10-0706-03 10-0706-04 10-0706-14 10-0806-04 10-0806-05 10-0806-15	9/16 open end, 1/2 & 7/8 socket (six point) 1/16 & 5/64 hex keys, spanner wrench
10-0708-06 10-0708-07 10-0708-17 10-0808-06 10-0808-07 10-0808-17	3/4 open end, 5/8 & 1-1/8 socket (six point) 1/8 & 3/32 (2) hex keys, spanner wrench